

ROOF GLUE ROOFING

Cold glue for bitumen roofing



PRODUCT DATA SHEET



Product description

A high-quality cold glue reinforced with fibres for professional and quick glueing of all bitumen roofing without a roofing torch. In a single application, the entire roll of roofing (including the seams) is bonded and small cracks in the substrate are filled. **ROOF GLUE ROOFING** also provides a waterproof, elastic buffer layer between the substrate and the roof covering. Blistering is also prevented.

Application

For use with all Aquaplan roofing membranes or other bitumen roofing membranes.

Advantages

- › Fills small cracks
- › Safe and easy installation
- › Makes blistering impossible
- › Corrections can be made afterwards
- › Reinforced with fibres

How much product do I need?

About 1 m²/l

Handy tips?

- **ROOF GLUE ROOFING** is made from bitumen, fast-evaporating solvents and elastic fibres.
- Store in a cool, dry place.
- Do not apply if the ambient temperature is below +5°C or above +35°C.
- Always work from top to bottom. A flat roof requires a gentle pitch for water drainage.
- Clean your tools with white spirit or turpentine.

Material	Colour	Contents	Coverage	Drying time	Coats	Overpaintable
Bitumen, solvents and fibres	Black	1 l / 5 l / 10 l / 20 l	About 1 m ² /l	Weigh down seams for about 24 hours	1	Yes

ROOF GLUE ROOFING

Cold glue for bitumen roofing



INSTRUCTIONS



What do I need?



How do I prepare the surface?

- First dry and remove all dust and grease from the substrate.
- Repair blisters, cracks and tears in the weathered bitumen substrate with **ROOF REPAIR REGULAR** or the elastic **ROOF SEAL MASTIC SBS** sealant. If necessary, reinforce with **ANTI-CRACK**, a tear-resistant polyester fleece.
- Clean the substrate and impregnate it with quick-drying **ROOF PRIMER ROOFING** bitumen bonding varnish (max. drying time 3 hrs) to ensure optimum adhesion.




How do I use the product?

- Apply one coat of cold **ROOF GLUE ROOFING** with a brush or floor squeegee, using approx. 1 kg/m².
- Roll out an entire roll of roofing (polyester and/or glass fleece inlay) onto the freshly applied glue and press down.
- Press the overlaps (approx. 7 cm) firmly and smooth them out with a putty knife. Weigh down the seams for about 24 hours.



TIP : Consult the detailed installation instructions on www.aquaplan.com for expert roof construction on various substrates. For slopes greater than 15%, it is recommended to mechanically fasten the glued roofing membrane on the highest side to prevent it from slipping down. Use special, galvanised **SHINGLE & ROOF NAILS**.

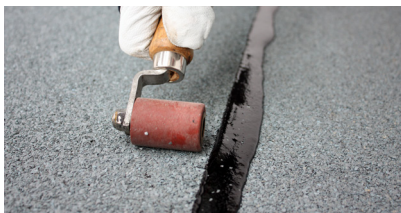

Would you like more information?

We are ready to answer all your questions.

Feel free to contact us:

Belgium: 03 248 30 00 or info@aquaplan.com

The Netherlands: 0162 42 29 00 or verkoop-dhz@martensgroep.eu

Website: www.aquaplan.com

